

YASKAWA AC Drive Option **PROFINET** Installation Manual


Type: SI-EP3

To properly use the product, read this manual thoroughly and retain for easy reference, inspection, and maintenance. Ensure the end user receives this manual.

安川インバータ オプション **PROFINET通信** 取扱説明書

形 式 SI-EP3

製品を安全にお使いいただくために、本書を必ずお読みください。
また、本書をお手元に保管していただくとともに、最終的に本製品をご使用になるユーザー様のお手元に確実に届けられるよう、お取り計らい願います。

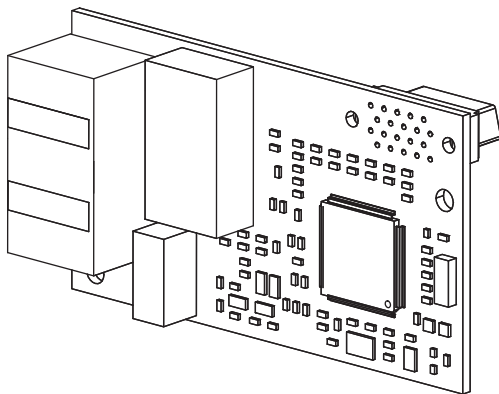

Copyright © 2016 YASKAWA ELECTRIC CORPORATION

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of Yaskawa. No patent liability is assumed with respect to the use of the information contained herein. Moreover, because Yaskawa is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Yaskawa assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

Table of Contents

1	PREFACE AND SAFETY	4
2	OVERVIEW	9
3	RECEIVING	13
4	OPTION COMPONENTS	14
5	INSTALLATION PROCEDURE	18
6	RELATED DRIVE PARAMETERS	35
7	PROFINET MESSAGING	41
8	WEB INTERFACE	45
9	TROUBLESHOOTING	57
10	EUROPEAN STANDARDS	62
11	SPECIFICATIONS	65
12	DISPOSAL	66

1 Preface and Safety

YASKAWA Electric supplies component parts for use in a wide variety of industrial applications. The selection and application of YASKAWA products remain the responsibility of the equipment designer or end user.

YASKAWA accepts no responsibility for the way its products are incorporated into the final system design. Under no circumstances should any YASKAWA product be incorporated into any product or design as the exclusive or sole safety control. Without exception, all controls should be designed to detect faults dynamically and fail safely under all circumstances. All products designed to incorporate a component part manufactured by YASKAWA must be supplied to the end user with appropriate warnings and instructions as to the safe use and operation of that part. Any warnings provided by YASKAWA must be promptly provided to the end user. YASKAWA offers an express warranty only as to the quality of its products in conforming to standards and specifications published in the manual. **NO OTHER WARRANTY, EXPRESS OR IMPLIED, IS OFFERED.** YASKAWA assumes no liability for any personal injury, property damage, losses, or claims arising from misapplication of its products.

◆ Applicable Documentation

The following manuals are available for the option:

Option

YASKAWA AC Drive Option SI-EP3 PROFINET Installation Manual Manual No: TOBP C730600 89 (This book)	This guide is packaged together with the product and contains information necessary to install the option and set related drive parameters.
YASKAWA AC Drive Option SI-EP3 PROFINET Technical Manual Manual No: SIEP C730600 89	The technical manual contains detailed information about the option pertaining to communication protocols, and supported features and messaging. Access the following sites to obtain the technical manual: U.S.: http://www.yaskawa.com Europe: http://www.yaskawa.eu.com Japan: http://www.e-mechatronics.com Other areas: Check the back cover of these manuals. For questions, contact Yaskawa or a Yaskawa representative.

Drive

YASKAWA AC Drive Manuals	Drive manuals contain basic installation and wiring information in addition to detailed parameter setting, fault diagnostic, and maintenance information. The most recent versions of these manuals are available for download on our documentation websites: U.S.: http://www.yaskawa.com Europe: http://www.yaskawa.eu.com Japan: http://www.e-mechatronics.com Other areas: Check the back cover of these manuals. For questions, contact Yaskawa or a Yaskawa representative.
---------------------------------	---

◆ Terms

Note:	Indicates supplemental information that is not related to safety messages.
Option:	YASKAWA AC Drive Option SI-EP3 PROFINET
Drive:	<ul style="list-style-type: none">• YASKAWA AC Drive 1000-Series (A1000, U1000, U1000L, Z1000U)• YASKAWA AC Drive GA500• YASKAWA AC Drive GA700• YASKAWA AC Drive GA800
Keypad:	<ul style="list-style-type: none">• LCD Operator for YASKAWA AC Drive 1000-Series• LED Operator for YASKAWA AC Drive 1000-Series• LCD Keypad for YASKAWA AC Drive GA500, GA700, and GA800• LED Keypad for YASKAWA AC Drive GA500, GA700, and GA800
V/f:	V/f Control
CLV:	Closed Loop Vector Control
OLV/PM:	Open Loop Vector Control for PM
AOLV/PM:	Advanced Open Loop Vector Control for PM
CLV/PM:	Closed Loop Vector Control for PM
H:	Indicates an engineering unit for hexadecimal number format.

◆ Registered Trademarks

- PROFINET is a registered trademark of PROFIBUS and PROFINET International (PI).
- Trademarks are the property of their respective owners.

1 Preface and Safety

◆ Supplemental Safety Information

Read and understand this manual before installing, operating, or servicing this option. Install the option according to this manual and local codes.

The following conventions indicate safety messages in this manual. Failure to heed these messages could cause fatal injury or damage products and related equipment and systems.

DANGER

Indicates a hazardous situation, which, if not avoided, will cause death or serious injury.

WARNING

Indicates a hazardous situation, which, if not avoided, could cause death or serious injury.

CAUTION

Indicates a hazardous situation, which, if not avoided, could cause minor or moderate injury.

NOTICE

Indicates an equipment damage message.

■ General Safety

General Precautions

- The diagrams in this book may include options and drives without covers or safety shields to illustrate details. Be sure to reinstall covers or shields before operating any devices. Use the option according to the instructions described in this manual.
- The diagrams in this manual are provided as examples only and may not pertain to all products covered by this manual.
- The products and specifications described in this manual or the content and presentation of the manual may be changed without notice to improve the product and/or the manual.
- Contact Yaskawa or a Yaskawa representative and provide the manual number shown on the front cover to order new copies of the manual.

DANGER

Heed the safety messages in this manual.

Failure to comply will cause death or serious injury.

The operating company is responsible for any injuries or equipment damage resulting from failure to heed the warnings in this manual.

WARNING

Electrical Shock Hazard

Do not modify the drive or option circuitry.

Modifications to circuitry can cause serious injury or death, will cause damage to the drive and option, and will void the warranty. Yaskawa is not responsible for modifications of the product made by the user.

NOTICE

Do not use steam or other disinfectants to fumigate wood for packaging the drive or option. Use alternative methods, for example heat treatment, before you package the components.

Gas from wood packaging fumigated with halogen disinfectants, for example fluorine, chlorine, bromine, iodine or DOP gas (phthalic acid ester), can cause damage to the drive and option.

2 Overview

This option provides a communications connection between the drive and a PROFINET network. The option connects the drive to a PROFINET network and facilitates the exchange of data.

This manual explains the handling, installation and specifications of this product.

PROFINET is a communications link to connect industrial devices (such as smart motor controllers, operator interfaces, and variable frequency drives) as well as control devices (such as programmable controllers and computers) to a network. PROFINET is a simple, networking solution that reduces the cost and time to wire and install factory automation devices, while providing interchangeability of like components from multiple vendors.

Install the option/PROFINET option on a drive to perform the following functions from a PROFINET master device:

- Operate the drive
- Monitor the drive operation status
- Change drive parameter settings

SI-EP3 is PROFINET Conformance Class A certified.

2 Overview

◆ Compatible Products

The option can be used with the products in [Table 1](#).

Table 1 Compatible Products

Product Series	Model(s)	Software Version <1>
A1000	CIMR-A□2A□□□□	≥1010
	CIMR-A□4A0002 to 4A0675	
	CIMR-A□4A0930 and 4A1200	≥3014
	CIMR-A□5A□□□□	≥5040 ≥1010
U1000	CIMR-U□□A□□□□	≥1010
	CIMR-U□□E□□□□	
	CIMR-U□□P□□□□	
	CIMR-U□□W□□□□	
U1000L	CIMR-U□□L□□□□	≥6210
	CIMR-U□□F□□□□	
	CIMR-U□□R□□□□	
	CIMR-U□□S□□□□	
Z1000U	CIMR-Z□□A□□□□	≥6110
	CIMR-Z□□E□□□□	
	CIMR-Z□□P□□□□	
	CIMR-Z□□W□□□□	
GA500 <2>	CIPR-GA50□□□□□	≥ 1010
GA700 <2>	CIPR-GA70□□□□□	≥1010
GA800 <2>	CIPR-GA80□□□□□	≥9010

<1> Refer to “PRG” on the drive nameplate for the software version number.

<2> Before you install the option on a YASKAWA AC Drive GA500, GA700 or GA800, make sure that the option software version is PRG: 4400 or later.

- Note:**
1. Refer to the option package labeling in the field designated “PRG” (four digit number)” or the option labeling in the field to identify the option software version. Refer to [Figure 2](#) for details.
 2. For Yaskawa customers in the North or South America region:
If your product is not listed in [Table 1](#), refer to the web page below to confirm this manual is correct for your product. The web page provides a list of option manuals by product, and a direct link to download a PDF.

Scan QR code



Or refer to: <http://www.yaskawa.com/optionlookup>

◆ Install the Option on a GA500 Drive

An option card installation case is necessary to install the option on a GA500 drive. The option card installation case model is: JOHB-GA500. This case is sold separately. Refer to the option card installation case manual for more information about installation.

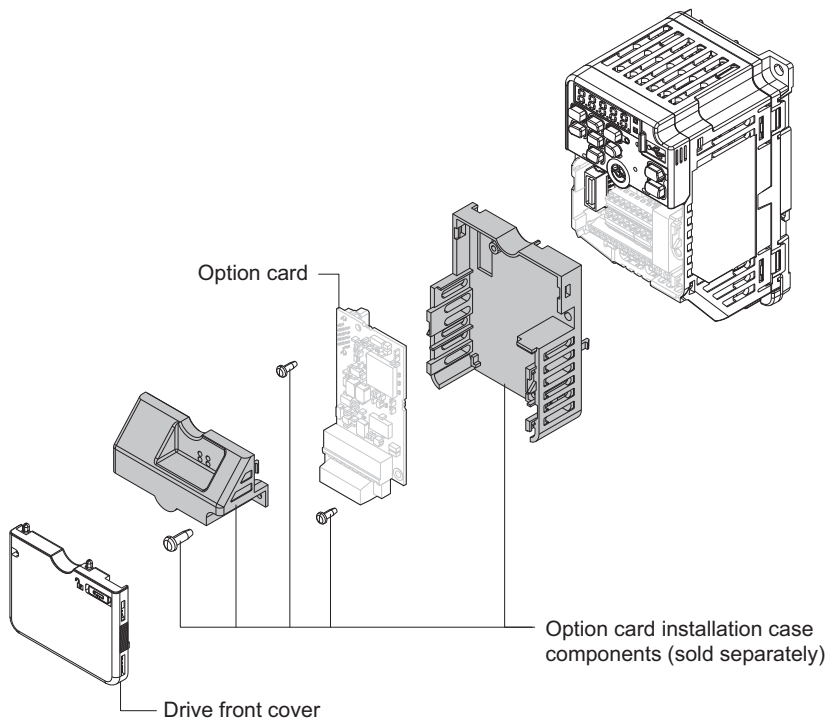


Figure 1 Option Card Installation Case

3 Receiving

After receiving the option package:





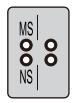
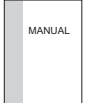
1. Make sure that the option is not damaged and no parts are missing. Contact your sales outlet if the option or other parts appear damaged.

NOTICE: Do not use damaged parts to connect the drive and the option. Failure to comply could damage the drive and option.

2. Confirm that the model number on the option nameplate and the model listed in the purchase order are the same. Refer to [Figure 2](#) on page 14 for details. Contact the distributor where the option was purchased or contact Yaskawa or a Yaskawa representative about any problems with the option.

◆ Option Package Contents

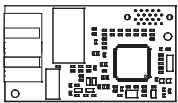Table 2 Option Package Contents

Description:	Option	Ground Wire <1>	Screws (M3)	LED Labels		Installation Manual
				1000-Series	GA500, GA700, and GA800	
—						
Quantity:	1	1	3 <2>	1	1	1

<1> GA700 and GA800 drives do not use the ground wire.


<2> GA700 and GA800 drives use two screws only.

◆ Installation Tools

- A Phillips screwdriver. Phillips screw sizes vary by drive capacity.
- A flat-blade screwdriver (blade depth: 0.4 mm (0.02 in), width: 2.5 mm (0.1 in)).
- A pair of diagonal cutting pliers.
- A small file or medium-grit sandpaper.

4 Option Components

◆ PROFINET Option

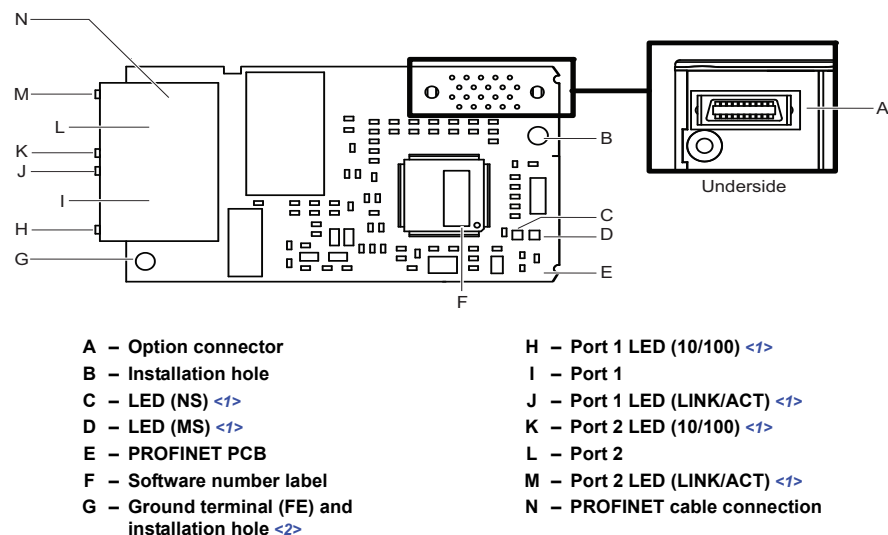

<1> Refer to Option LED Display on page 15 for details on the LEDs.

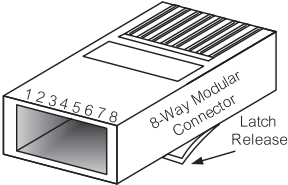
<2> Connect the provided ground wire during installation. Installation on GA700 and GA800 drives does not require the ground wire.

Figure 2 PROFINET Option Components

◆ Communication Modular Connector CN1 Port 1/Port 2

The communication modular connector CN1 on the option is a modular dual RJ45 female connector designated port 1 and port 2. Port 1 and port 2 are the connection point for a customer supplied male Ethernet network communication cable.

Table 3 Male 8-way Ethernet Modular Connector (Customer-Supplied)

Male EtherNet 8-Way Modular Connector	Pin	Description
	1 (Pair 2)	Transmit data (TXD) +
	2 (Pair 2)	Transmit data (TXD) -
	3 (Pair 3)	Receive data (RXD) +
	4 (Pair 1)	Not used <1>
	5 (Pair 1)	Not used <1>
	6 (Pair 3)	Receive data (RXD) -
	7 (Pair 4)	Not used <1>
	8 (Pair 4)	Not used <1>

<1> Not used for 10 Mbps and 100 Mbps networks.

◆ Option LED Display

The option has six LEDs:

Bi-color Status LEDs:


- Module status (MS) red/green
- Network status (NS) red/green

Ethernet LEDs (2 each):

- Network speed-10/100 yellow
- Link status and network activity-Link/Act green



1000-Series Label



GA500, GA700, and GA800 Label

Figure 3 Option LED Labels

4 Option Components

The operational states of the option LEDs after the power-up diagnostic LED sequence is completed are described in [Table 4](#). The states with a number in parenthesis are the number of pulses of 250 ms on, 250 ms off cycles, followed by 500 ms off, then repeating the cycle. Wait at least 2 seconds for the power-up diagnostic process to complete before verifying LED states.

Table 4 Option LED States

Name	Indication		Operating Status	Description
	Color	Status		
MS (visible through drive cover)	—	OFF	Power supply OFF	Power is not being supplied to the drive.
	Green	ON	Option operating	The option is operating normally and initialization is complete.
	Green	Flashing (1)	Diagnostics	Diagnostic data available.
	Green	Flashing (2)	Configuration tool	Identified by a configuration tool.
	Red	ON	Default MAC or fatal error occurred.	Default MAC address has been programmed or the option has detected an unrecoverable error.
	Red	Flashing (1)	Invalid Station Name programmed	Invalid Station name programmed into device. It must be rewritten with a valid name from PLC software or webpage.
	Red	Flashing (2)	No IP (non-fatal)	No IP address assigned.
	Red	Flashing (3)	No station name (non-fatal)	No station name assigned.
	Red	Flashing (4)	Init failure (non-fatal)	Failed to initialize module.
	Green/Red	Flashing	Option self-test	The option is in self-test mode.
NS (visible through drive cover)	—	OFF	Offline or Power supply OFF	—
	Green	ON	Connected	Connection established with I/O controller and in RUN mode.
	Green	Flashing	Connected and stopped	Connection established with I/O controller and in STOP mode.
	Red	ON	BUS fault	Unrecoverable BUS fault.
	Red	Flashing (1)	Lost communication	Host communication is temporarily lost.
	Red	Flashing (2)	Lost link	No link detected to network.
	Red	Flashing (3)	IP address settings bad	Use the operator or Drive Wizard to check and change F7 parameters, then cycle power. You can also set the PLC to assign the IP address, which will auto-clear the fault.

Name	Indication		Operating Status	Description
	Color	Status		
10/100 (visible at RJ45 jack)	Yellow	OFF	10 Mbps is established	–
	Yellow	ON	100 Mbps is established	–
LINK/ACT (visible at RJ45 jack)	Green	OFF	Link is not established	–
	Green	ON	Link is established	–
	Green	Flashing	Link is established and there is network activity	–

■ Power-Up Diagnostics

An LED test is performed each time the drive is powered up. The initial boot sequence may take several seconds. After the LEDs have completed the diagnostic LED sequence, the option is successfully initialized. The LEDs then assume operational conditions as shown in [Table 4](#).

Table 5 Power-Up Diagnostic LED Sequence

Sequence	Module Status (MS)	Network Status (NS)	Time (ms)
1	Green	OFF	250
2	Red	OFF	250
3	Green	OFF	-
4	Green	Green	250
5	Green	Red	250
6	Green	OFF	-

5 Installation Procedure

◆ Section Safety

DANGER

Electrical Shock Hazard

Do not inspect, connect, or disconnect any wiring while the drive is energized.

Failure to comply will cause death or serious injury.

Before servicing, disconnect all power to the equipment and wait for at least the time specified on the warning label. The internal capacitor remains charged even after the drive is de-energized. The charge indicator LED will extinguish when the DC bus voltage is below 50 Vdc. When all indicators are OFF, measure for unsafe voltages to confirm the drive is safe.

WARNING

Electrical Shock Hazard

Do not operate equipment with covers removed.

Failure to comply could cause death or serious injury.

The diagrams in this section may include options and drives without covers or safety shields to illustrate details. Reinstall covers and shields before operating the drive and run the drive according to the instructions described in this manual.

Do not allow unqualified personnel to perform work on the drive or option.

Failure to comply could cause death or serious injury.

Only authorized personnel familiar with installation, adjustment, and maintenance of AC drives and options may perform work.

Do not remove covers or touch circuit boards while the drive is energized.

Failure to comply could cause death or serious injury.



WARNING

Do not use damaged wires, stress the wiring, or damage the wire insulation.

Failure to comply could cause death or serious injury.

Fire Hazard

Tighten all terminal screws to the specified tightening torque.

Loose or overtightened connections could cause erroneous operation and damage to the terminal block or start a fire and cause death or serious injury.

NOTICE

Damage to Equipment

Observe proper electrostatic discharge (ESD) procedures when handling the option, drive, and circuit boards.

Failure to comply could cause ESD damage to circuitry.

Never connect or disconnect the motor from the drive while the drive is outputting voltage.

Improper equipment sequencing could damage the drive.

Do not connect or operate any equipment with visible damage or missing parts.

Failure to comply could further damage the equipment.

Do not use unshielded wire for control wiring.

Failure to comply may cause electrical interference resulting in poor system performance. Use shielded, twisted-pair wires and ground the shield to the ground terminal of the drive.

Properly connect all pins and connectors on the option and drive.

Failure to comply could prevent proper operation and damage equipment.

Confirm that all connections are correct after installing the option and connecting peripheral devices.

Failure to comply could damage the option.

5 Installation Procedure

◆ Procedures for Installing and Wiring Options on a Drive

Procedures to install and wire the option are different for different drive models.

Refer to [Table 6](#) to check the procedures to install and wire the option on a drive.

Table 6 Procedures for Installing and Wiring Options on a Drive

Product Series	Procedures for Installing and Wiring Options on a Drive	Page
A1000	Procedure A	21
U1000	Procedure A	21
U1000L	Procedure A	21
Z1000U	Procedure A	21
GA500	<1> <2>	—
GA700	Procedure B	27
GA800	Procedure B	27

<1> Use the option card installation case manual to install the option on GA500 drives.


<2> Before you install the option on a YASKAWA AC Drive GA500, make sure that the option software version is PRG: 4400 or later.

■ Procedure A

This section shows the procedure to install and wire the option on a 1000-series drive.

Prepare the Drive for the Option

1. Correctly wire the drive as specified by the manual packaged with the drive.
2. Make sure that the drive functions correctly.
Refer to [Figure 4](#) for an exploded view of the drive with the option and related components for reference in the installation procedure.

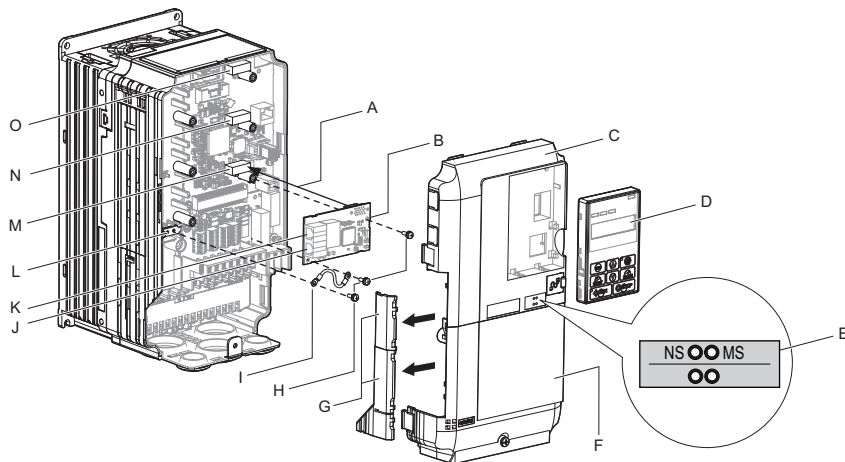

- | | |
|---|---|
| A – Insertion point for CN5 connector | K – Option modular connector CN1 port 2 |
| B – SI-EP3 option | L – Drive grounding terminal (FE) |
| C – Drive front cover | M – Connector CN5-A |
| D – Keypad | N – Connector CN5-B
(Not available for communication option installation.) |
| E – LED label | O – Connector CN5-C
(Not available for communication option installation.) |
| F – Drive terminal cover | |
| G – Removable tabs for wire routing | |
| H – Included screws | |
| I – Ground wire | |
| J – Option modular connector CN1 port 1 | |

Figure 4 Drive Components with Option

5 Installation Procedure

Install the Option

Remove the front covers of the drive before you install the option.

Refer to the drive manual for information about how to remove the front covers. Different drive sizes have different cover removal procedures.

You can only install this option into the **CN5-A** connector on the drive control board.

DANGER! Electrical Shock Hazard. Do not inspect, connect, or disconnect any wiring while the drive is energized. Failure to comply will cause death or serious injury. Before servicing, disconnect all power to the equipment and wait for at least the time specified on the warning label. The internal capacitor remains charged even after the drive is de-energized. The charge indicator LED will extinguish when the DC bus voltage is below 50 Vdc. When all indicators are OFF, measure for unsafe voltages to confirm the drive is safe.

1. Shut off power to the drive, wait the appropriate amount of time for voltage to dissipate, then remove the keypad (D) and front covers (C, F). Refer to the manual packaged with the drive for details on keypad and cover removal.

NOTICE: Damage to Equipment. Observe proper electrostatic discharge (ESD) procedures when handling the option, drive, and circuit boards. Failure to comply could cause ESD damage to circuitry.

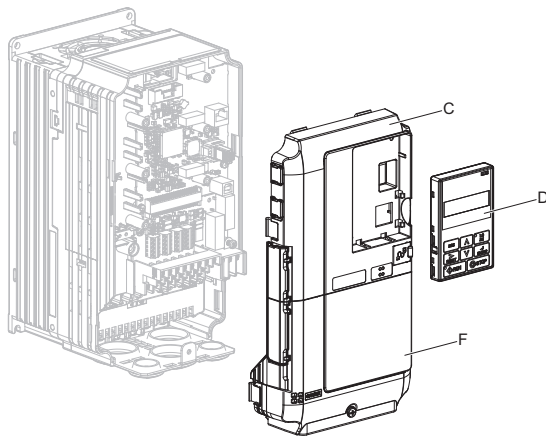


Figure 5 Remove the Keypad, Front Cover, and Terminal Cover

2. Affix the LED label (E) in the appropriate position on the drive front cover (C).

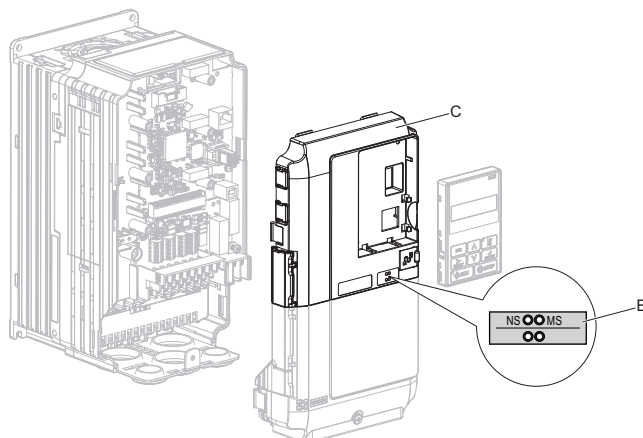


Figure 6 Affix the LED Label

3. Insert the option card (B) into the CN5-A (M) connector on the drive and fasten it into place using one of the included screws (H). Tighten the screw to 0.5 to 0.6 N·m (4.4 to 5.3 in·lb).

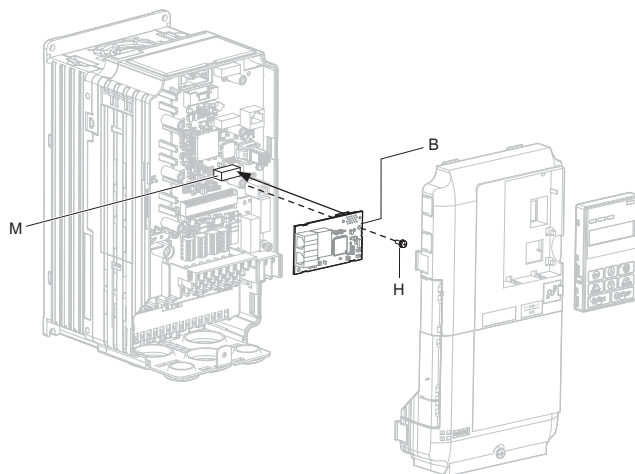


Figure 7 Insert the Option

5 Installation Procedure

4. Connect one end of the ground wire (I) to the ground terminal (L) using one of the remaining provided screws (H). Connect the other end of the ground wire (I) to the remaining ground terminal and installation hole on the option (B) using the last remaining provided screw (H). Tighten both screws to 0.5 to 0.6 N·m (4.4 to 5.3 in·lb).


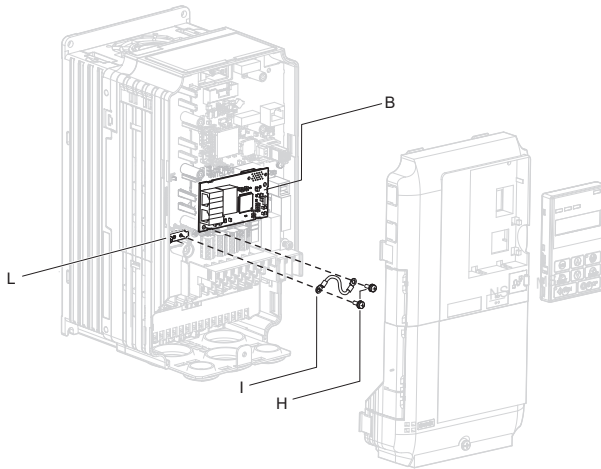


Figure 8 Connect the Ground Wire

Note: The drive has only two ground terminal screw holes (L). Two ground wires should share the same ground terminal when connecting three options.

5. Route the option wiring inside the enclosure as shown in **Figure 9-B**. Take proper precautions so that the front covers will easily fit back onto the drive. Users may also choose to route the option wiring through openings on the front cover of some models. Remove the perforated tabs on the left side of the front cover as shown in **Figure 9-A** to create the necessary openings on these models. Refer to the Peripheral Devices & Options section of the drive instruction manual for more information.

Note: Separate communication cables from main circuit wiring and other electrical lines to avoid potential sources of electrical interference.

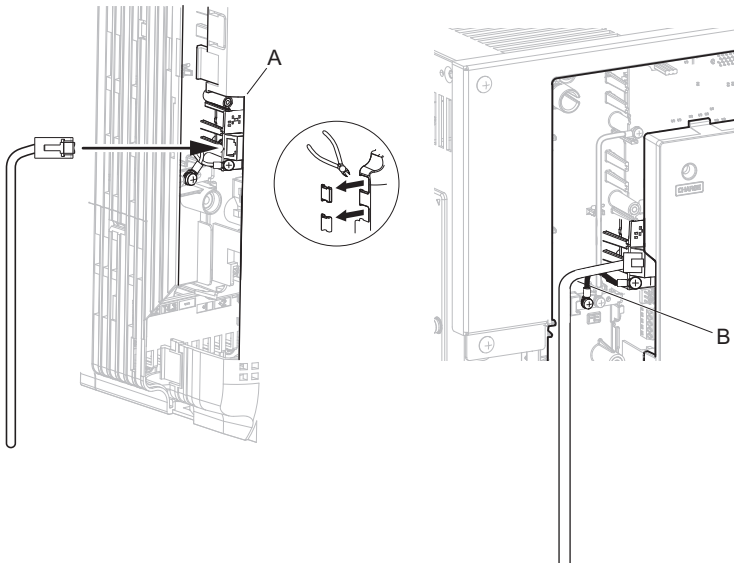

A – Route wires through the openings provided on the left side of the front cover. <1>

B – Use the open space provided inside the drive to route option wiring.

<1> The drive will not meet Enclosed wall-mounted type (IP20/UL Type 1) requirements if wiring is exposed outside the enclosure.

Figure 9 Wire Routing Examples

5 Installation Procedure

6. Firmly connect the PROFINET Cat 5e communication cable to the option modular connector CN1 port 1 or port 2. Install PROFINET communications cables apart from main-circuit wiring and other electrical and power lines. Ensure the cable end is firmly connected (see [Figure 17](#)). Refer to [Communication Cable Specifications on page 33](#) for details of installing.

Note: Do not connect or disconnect the communication cable while the drive is powered up or while the drive is in operation. Failure to comply may cause a static discharge, which will cause the option card to stop working properly. Cycle power on the drive and option card to reestablish functionality.

7. Use the second option modular connector CN1 port to daisy chain a series of drives where applicable.
8. Reattach the drive front covers (C, F) and the keypad (D).

NOTICE: Do not pinch cables between the front covers and the drive. Failure to comply could cause erroneous operation.

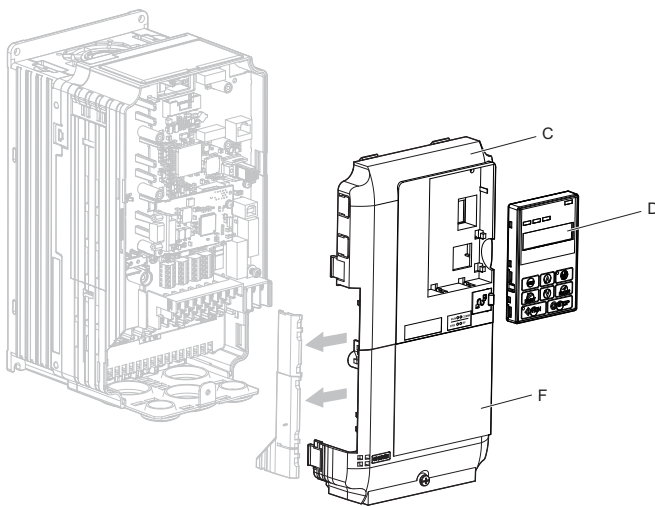


Figure 10 Replace the Front Covers and Keypad

9. Set drive parameters in [Table 7](#) for correct option performance. Be sure to set parameter F6-30 to a node address unique to the network.

■ Procedure B

This section shows the procedure to install and wire the option on a GA700 or GA800 drive.

Prepare the Drive for the Option

Before you install the option on a YASKAWA AC Drive GA700 or GA800, make sure that the option software version is PRG: 4400 or later.

1. Correctly wire the drive as specified by the manual packaged with the drive.
2. Make sure that the drive functions correctly.

Refer to [Figure 11](#) for an exploded view of the drive with the option and related components for reference in the installation procedure.

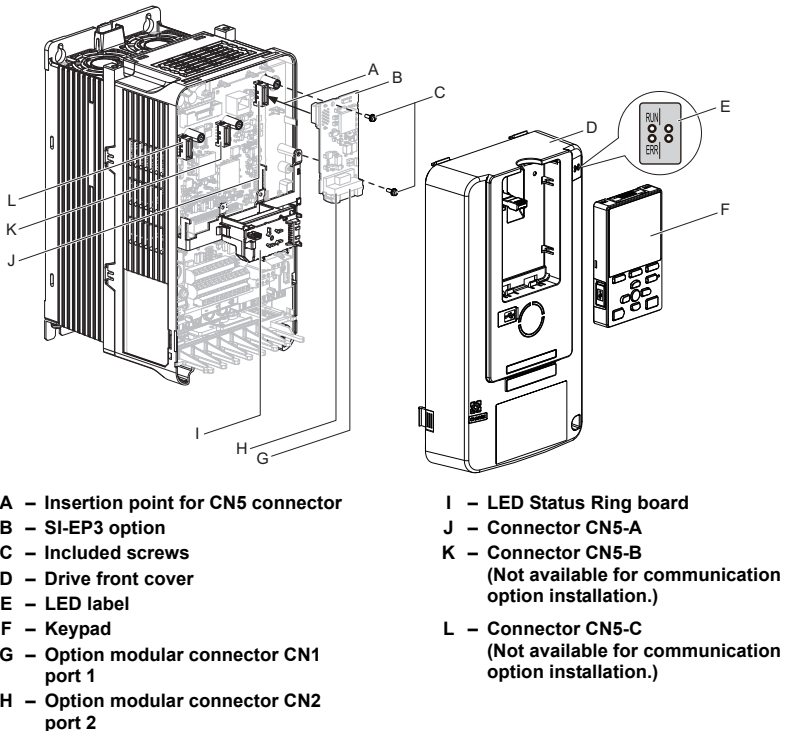


Figure 11 Drive Components with Option

5 Installation Procedure

Install the Option

Remove the front cover of the drive before you install the option.

Refer to the drive manual for information about how to remove the front cover. Different drive sizes have different cover removal procedures.

You can only install this option into the **CN5-A** connector on the drive control board.

DANGER! Electrical Shock Hazard. Do not inspect, connect, or disconnect any wiring while the drive is energized. Failure to comply will cause death or serious injury. Before servicing, disconnect all power to the equipment and wait for at least the time specified on the warning label. The internal capacitor remains charged even after the drive is de-energized. The charge indicator LED will extinguish when the DC bus voltage is below 50 Vdc. When all indicators are OFF, measure for unsafe voltages to confirm the drive is safe.

1. Affix the LED label (E) in the appropriate position on the drive front cover (D).

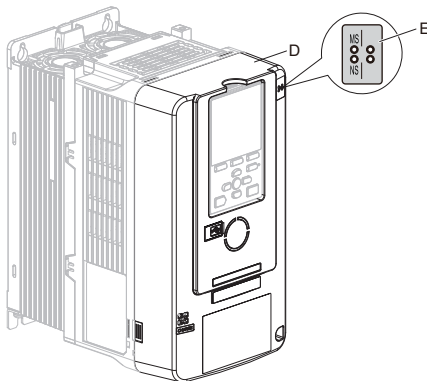


Figure 12 Affix the LED Label

2. Shut off power to the drive, wait the appropriate amount of time for voltage to dissipate, then remove the front cover (D). Refer to the manual packaged with the drive for details on cover removal.

NOTICE: Damage to Equipment. Observe proper electrostatic discharge (ESD) procedures when handling the option, drive, and circuit boards. Failure to comply could cause ESD damage to circuitry.

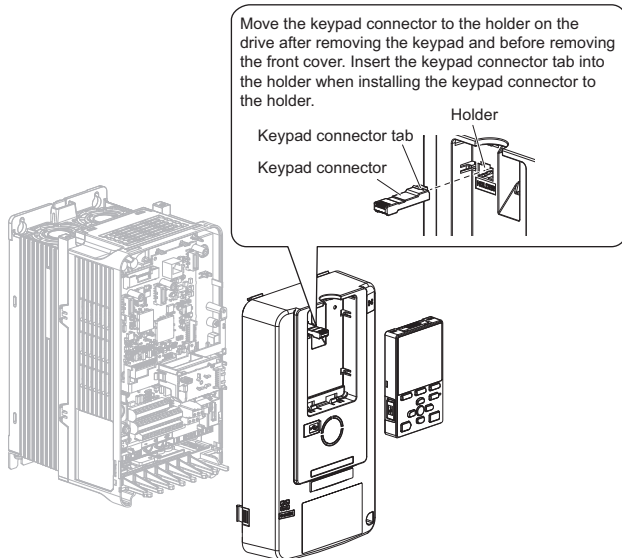


Figure 13 Remove the Front Cover and Keypad

5 Installation Procedure

3. Carefully remove the LED Status Ring board (I) and place it on the right side of the drive using the temporary placement holes. Refer to the manual packaged with the drive for details on removing the LED Status Ring board.

NOTICE: Do not remove the LED Status Ring board cable connector. Failure to comply could cause erroneous operation and damage the drive.

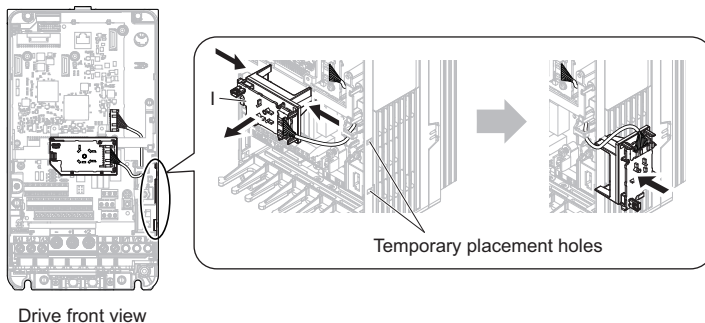


Figure 14 Remove the LED Status Ring Board

4. Insert the option card (B) into the CN5-A connector (J) on the drive and fasten it into place using the included screws (C). Tighten both screws to 0.5 to 0.6 N·m (4.4 to 5.3 in·lb).

Note: Only two screws are necessary to install the option on a GA700 or GA800 drive. A ground wire is not necessary. The option package ships with three screws and a ground wire for installation on other product series. Do not use the ground wire or the extra screw.

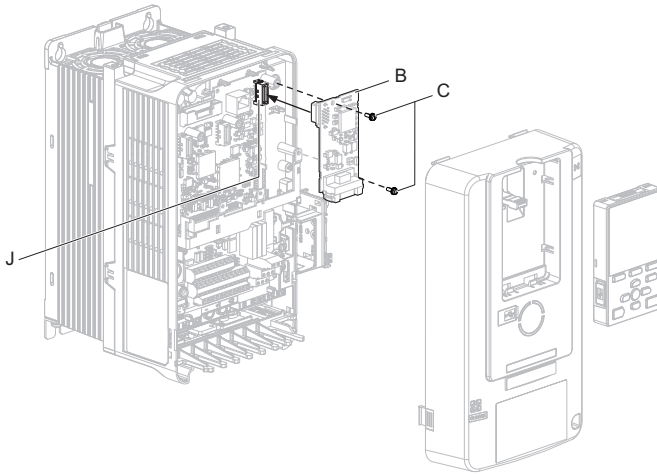


Figure 15 Insert the Option Card

5. Firmly connect the PROFINET Cat 5e communication cable to the option modular connector CN1 port 1 or port 2. Install PROFINET communications cables apart from main-circuit wiring and other electrical and power lines. Ensure the cable end is firmly connected (see [Figure 17](#)). Refer to [Communication Cable Specifications on page 33](#) for details of installing.

- Note:**
1. Separate communication cables from main circuit wiring and other electrical lines.
 2. Do not connect or disconnect the communication cable while the drive is powered up or while the drive is in operation. Failure to comply may cause a static discharge, which will cause the option card to stop working properly. Cycle power on the drive and option card to reestablish functionality.
 3. Maximum transmission distance is 100 m (328 ft). Minimum wiring distance between stations is 0.2 m (7.9 in).
6. Use the second option modular connector CN1 port to daisy chain a series of drives where applicable.

5 Installation Procedure

7. Reattach the LED Status Ring board (I).

Use the open space provided inside the LED Status Ring board to route option wiring.

NOTICE: Do not pinch cables between the front cover or the LED Status Ring board and the drive. Failure to comply could cause erroneous operation.

8. Reattach the drive front cover (D) and the keypad (F).

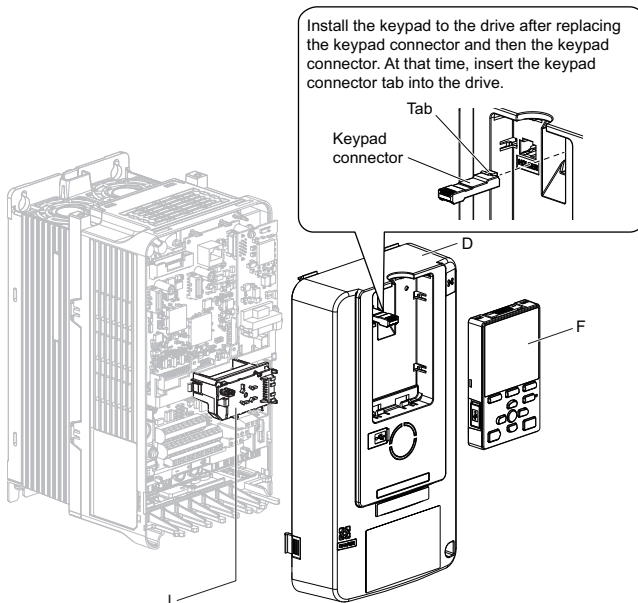



Figure 16 Replace the Front Cover and Keypad

9. Set drive parameters in [Table 7](#) for correct option performance. Be sure to set parameter F6-30 to a node address unique to the network.

◆ Communication Cable Specifications

Use only PROFINET dedicated communication cable; the Yaskawa warranty does not cover other cable types.

■ Option Connection Diagram

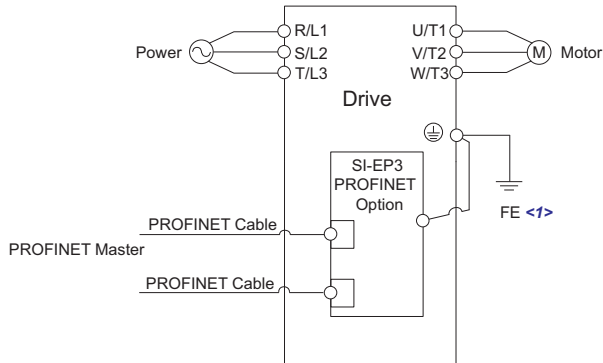

<1> Connect the provided ground wire for installations on 1000-series drives and GA500 drives.
The ground wire is not necessary for installation on GA700 or GA800 drives.

Figure 17 Option Connection Diagram

5 Installation Procedure

■ Communication Cable Topology

The option modular connector CN1 port 1 and port 2 act as a switch to allow for flexibility in cabling topology. Users may employ a traditional star network topology using a single communication cable port on the option.

Users may also choose to employ a ring topology using both communication modular connector ports on the option and reduce the requirements of PROFINET switch ports.

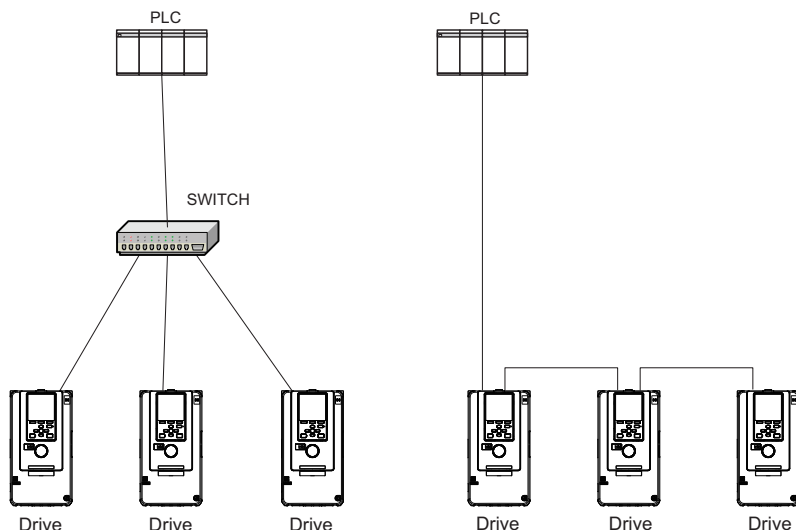


Figure 18 Topology Options

◆ GSD Files

To facilitate network implementation, obtain a GSD file from one of the following websites depending on your region:

U.S.: <http://www.yaskawa.com>

Europe: <http://www.yaskawa.eu.com>

Japan: <http://www.e-mechatronics.com>

Other areas: Check the back cover of these manuals.

For questions, contact Yaskawa or a Yaskawa representative.

6 Related Drive Parameters

The parameters in [Table 7](#) set the drive for operation with the option. Confirm proper setting of all parameters in [Table 7](#) before starting network communications. Refer to the manual packaged with the drive for details on setting parameters.

Note: Hex.: MEMOBUS addresses that you can use to change parameters over network communication are represented in hexadecimal numbers.

Table 7 Related Parameter Settings

No. (Hex.)	Name	Description	Values
b1-01 (0180) <1>	Reference 1 Source	Selects the input method for frequency reference. 0: Keypad 1: Analog Input 2: Memobus/Modbus Communications 3: Option PCB 4: Pulse Train Input	Default: 1 Range: 0 to 4 (Set to 3)
b1-02 (0181) <1>	Run Command 1 Source	Selects the input method for the Run command. 0: Keypad 1: Digital Input 2: Memobus/Modbus Communications 3: Option PCB	Default: 1 Range: 0 to 3 (Set to 3)
F6-01 (03A2)	Communication Error Selection	Selects drive response when a bUS error is detected during communications with the option. 0: Ramp to Stop 1: Coast to Stop 2: Fast Stop (Use C1-09) 3: Alarm Only <2> 4: Alarm - Run at d1-04 <2> <3> 5: Alarm - Ramp to Stop <3>	Default: 1 Range: 0 to 5 <4>
F6-02 (03A3)	Comm External Fault (EF0) Detect	Selects the condition for external fault detection (EF0). 0: Always detected 1: Detection during run only	Default: 0 Range: 0, 1
F6-03 (03A4)	Comm External Fault (EF0) Select	Selects drive response for external fault input (EF0) detection during option communications. 0: Ramp to Stop 1: Coast to Stop 2: Fast Stop (Use C1-09) 3: Alarm Only <2>	Default: 1 Range: 0 to 3
F6-06 (03A7) <5>	Torque Reference/Limit by Comm	Enabling this parameter allows d5-01 to determine whether the value is read as the Torque Limit value (d5-01 = 0) or the Torque Reference value (d5-01 = 1). 0: Disabled 1: Enabled <6>	Default: 0 Range: 0, 1
F6-07 (03A8)	MultiStep Ref Priority Select	0: MultiStep References Disabled 1: MultiStep References Enabled	Default: 0 <7> Range: 0, 1

6 Related Drive Parameters


No. (Hex.)	Name	Description	Values
F6-08 (036A)	Comm Parameter Reset @Initialize	Selects whether communication-related parameters F6-□□ and F7-□□ are set back to original default values when the drive is initialized using parameter A1-03. 0: No Reset - Parameters retained 1: Reset - Back to factory default Note: The setting value is not changed even when F6-08 is set to 1 and the drive is initialized using A1-03.	Default: 0 Range: 0, 1
F6-14 (03BB)	Bus Error Auto Reset	Sets the automatic reset function for bUS [Option Communication Errors]. 0: Disabled 1: Enabled	Default: 0 Range: 0, 1
F6-15 (0B5B) <I>	Comm. Option Parameters Reload	Selects whether F6-□□/F7-□□ communication-related parameters changed are enabled. 0: Reload at Next Power Cycle 1: Reload Now 2: Cancel Reload Request Note: F6-15 is reset to 0 after setting 1 or 2.	Default: 0 Range: 0 to 2
F7-01 (03E5) <9> <10> <11>	IP Address 1	Sets the static/fixed IP address. Parameter F7-01 sets the most significant octet.	Default: 192 Min: 0 Max: 255
F7-02 (03E6) <9> <10> <11>	IP Address 2	Sets the static/fixed IP address. Parameter F7-02 sets the second most significant octet.	Default: 168 Min: 0 Max: 255
F7-03 (03E7) <9> <10> <11>	IP Address 3	Sets the static/fixed IP address. Parameter F7-03 sets the third most significant octet.	Default: 1 Min: 0 Max: 255
F7-04 (03E8) <9> <10> <11>	IP Address 4	Sets the static/fixed IP address. Parameter F7-04 sets the fourth most significant octet.	Default: 20 Min: 0 Max: 255
F7-05 (03E9) <11>	Subnet Mask 1	Sets the static/fixed Subnet Mask. Parameter F7-05 sets the most significant octet.	Default: 255 Min: 0 Max: 255
F7-06 (03EA) <11>	Subnet Mask 2	Sets the static/fixed Subnet Mask. Parameter F7-06 sets the second most significant octet.	Default: 255 Min: 0 Max: 255
F7-07 (03EB) <11>	Subnet Mask 3	Sets the static/fixed Subnet Mask. Parameter F7-07 sets the third most significant octet.	Default: 255 Min: 0 Max: 255

6 Related Drive Parameters

No. (Hex.)	Name	Description	Values
F7-08 (03EC) <11>	Subnet Mask 4	Sets the static/fixed Subnet Mask. Parameter F7-08 sets the fourth most significant octet.	Default: 0 Min: 0 Max: 255
F7-09 (03ED) <11>	Gateway Address 1	Sets the static/fixed Gateway address. Parameter F7-09 sets the most significant octet.	Default: 192 Min: 0 Max: 255
F7-10 (03EE) <11>	Gateway Address 2	Sets the static/fixed Gateway address. Parameter F7-10 sets the second most significant octet.	Default: 168 Min: 0 Max: 255
F7-11 (03EF) <11>	Gateway Address 3	Sets the static/fixed Gateway address. Parameter F7-11 sets the third most significant octet.	Default: 1 Min: 0 Max: 255
F7-12 (03F0) <11>	Gateway Address 4	Sets the static/fixed Gateway address. Parameter F7-12 sets the fourth most significant octet.	Default: 1 Min: 0 Max: 255
F7-13 (03F1) <11>	Address Mode at Startup	Selects how the option address is set. 0: Static <10> 2: DCP	Default: 2 Range: 0, 2
F7-14 (03F2)	Duplex Mode Selection	Selects duplex mode setting. 0: Half/Half 1: Auto/Auto 2: Full/Full 3: Half/Auto 4: Half/Full 5: Auto/Half 6: Auto/Full 7: Full/Half 8: Full/Auto	Default: 1 Range: 0 to 8
F7-15 (03F3) <12>	Communication Speed Selection	Sets the communication speed. 10: 10/10 Mbps 100: 100/100 Mbps 101: 10/100 Mbps 102: 100/10 Mbps	Default: 10 Range: 10 to 102
F7-23 (03FB) <13>	Dynamic Output Assembly Parameter 1	Sets configurable output 1.	Default: 0H Min.: 0H Max.: FFFFH
F7-24 (03FC) <13>	Dynamic Output Assembly Parameter 2	Sets configurable output 2.	Default: 0H Min.: 0H Max.: FFFFH

6 Related Drive Parameters

No. (Hex.)	Name	Description	Values
F7-25 (03FD) <13>	Dynamic Output Assembly Parameter 3	Sets configurable output 3.	Default: 0H Min.: 0H Max.: FFFFH
F7-26 (03FE) <13>	Dynamic Output Assembly Parameter 4	Sets configurable output 4.	Default: 0H Min.: 0H Max.: FFFFH
F7-27 (03FF) <13>	Dynamic Output Assembly Parameter 5	Sets configurable output 5.	Default: 0H Min.: 0H Max.: FFFFH
F7-33 (0375) <13>	Dynamic Input Assembly Parameter 1	Sets configurable input 1.	Default: 0H Min.: 0H Max.: FFFFH
F7-34 (0376) <13>	Dynamic Input Assembly Parameter 2	Sets configurable input 2.	Default: 0H Min.: 0H Max.: FFFFH
F7-35 (0377) <13>	Dynamic Input Assembly Parameter 3	Sets configurable input 3.	Default: 0H Min.: 0H Max.: FFFFH
F7-36 (0378) <13>	Dynamic Input Assembly Parameter 4	Sets configurable input 4.	Default: 0H Min.: 0H Max.: FFFFH
F7-37 (0379) <13>	Dynamic Input Assembly Parameter 5	Sets configurable input 5.	Default: 0H Min.: 0H Max.: FFFFH

No. (Hex.)	Name	Description	Values
H5-11 (043C)	Communications ENTER Function Selection	<p>Selects whether an Enter command is necessary to change parameter values via MEMOBUS/Modbus communications.</p> <p>0: Parameter changes are activated when ENTER command is written</p> <p>1: Parameter changes are activated immediately without use of ENTER command</p>	<p>Default: 0 </p> <p>Range: 0, 1</p>

- <1> Set b1-02 = 3 to start and stop the drive with the PROFINET master device using serial communications. Set b1-01 = 3 to control the frequency reference of the drive via the master device.
- <2> Setting this parameter to 3 or 4 will cause the drive to continue operation after detecting a fault. Take proper measures such as installing an emergency stop switch when using settings 3 or 4.
- <3> Refer to the drive manual to know if settings 4 and 5 are available. Settings 4 and 5 are available in A1000 software versions PRG: 1021 and later.
- <4> The setting range for 1000-Series drives is different for different software versions. Refer to the instruction manual of a specific drive for more information.
- <5> Control method availability of this parameter depends on product series.
 - 1000-Series Drives: Parameter is available in CLV, AOLV/PM, and CLV/PM. In AOLV/PM, this value is read as the Torque Limit.
 - GA500 Drive: Parameter is available in OLV, AOLV/PM, and EZOLV. This value is read as the Torque Limit.
 - GA700, GA800 Drives: Parameter is available in OLV, CLV, AOLV, AOLV/PM, CLV/PM, and EZOLV. In OLV and EZOLV, this value is read as the Torque Limit.
- <6> The setting specifies that network communications provide the torque reference or torque limit. The motor may not rotate if the PLC does not supply a torque reference or torque limit.
- <7> Default setting is 1 for GA500.
- <8> Not available on 1000-series drives.
- <9> Cycle power for setting changes to take effect. Set F6-15 to 1 (Enable), to have settings take effect immediately on non-1000 series drives.
- <10> Set F7-01 to F7-04 when F7-13 is set to 0. All IP Addresses (F7-01 to F7-04) must be unique.
- <11> Set F7-01 to F7-12 when F7-13 is set to 0.
- <12> Set F7-15 when F7-14 is not set to 1.
- <13> If a value other than 0 is assigned to parameters F7-23 to F7-27 and F7-33 to F7-37 by the drive, that value will take precedent over a value set by the configuration software. If the value in the drive is 0 (default), the value from the configuration software is used.
- <14> The default setting is different for different product series. Refer to the instruction manual of a specific drive for more information.

6 Related Drive Parameters

Table 8 Option Monitors

No.	Name	Description	Range
U6-80 to U6-83	OPT IP ADR 1 to 4	Displays IP Address currently available; <ul style="list-style-type: none"> • U6 -80: First octet • U6 -81: Second octet • U6 -82: Third octet • U6 -83: Forth octet 	0 to 255
U6-84 to U6-87	Online Subnet 1 to 4	Displays subnet currently available; <ul style="list-style-type: none"> • U6 -84: First octet • U6 -85: Second octet • U6 -86: Third octet • U6 -87: Forth octet 	0 to 255
U6-88 to U6-91	Online Gateway	Displays gateway currently available; <ul style="list-style-type: none"> • U6 -88: First octet • U6 -89: Second octet • U6 -90: Third octet • U6 -91: Forth octet 	0 to 255
U6-92	Online Speed	Displays CN1 Port 1 link speed currently available.	10, 100
U6-93	Online Duplex	Displays CN1 Port 1 duplex setting currently available.	0: Half, 1: Full
U6-94	Online Speed	Displays CN1 Port 2 link speed currently available.	10, 100
U6-95	Online Duplex	Displays CN1 Port 2 duplex setting currently available.	0: Half, 1: Full
U6-97	OPT SPARE 4	Displays option software version.	-
U6-98	First Fault	Displays first option fault. Refer to <i>Option Fault Monitors U6-98 and U6-99 on page 60</i> for details.	-
U6-99	Current Fault	Displays current option fault. Refer to <i>Option Fault Monitors U6-98 and U6-99 on page 60</i> for details.	-

7 PROFINET Messaging

◆ PROFINET Overview

This section describes the communication profile used between the PROFINET I/O network and the option.

The option supports the PROFIdrive profile. Users can select between the control and status words according to the PROFIdrive profile or use the Yaskawa-specific control and status words.

◆ PROFIdrive Communication Profile

■ The Control Word and the Status Word

The contents of the Control Word and the Status Word are detailed in [Table 9](#), and [Table 10](#), respectively. The drive states are presented in the PROFIdrive State Machine (Refer to the option Technical Manual.).

■ Frequency Reference

The Frequency reference is a 16-bit word containing a sign bit and a 15-bit integer. A negative reference (indicating reverse direction of rotation) is formed by calculating the two's complement from the corresponding positive reference. The reference value is the desired output frequency.

■ Output Frequency

Output Frequency is a 16-bit word containing the current output frequency (U1-02) of the drive.

7 PROFINET Messaging

Table 9 Control Word for PROFIdrive Communication Profile

Bit	Name	Value	Proceed to STATE/Description
0	ON	1	Proceed to READY TO OPERATE.
	OFF1	0	Emergency OFF. Proceed to OFF1 ACTIVE; proceed further to READY TO SWITCH ON unless other interlocks (OFF2, OFF3) are active.
1	OFF2	1	Continue operation (OFF2 inactive).
		0	Emergency OFF. Proceed to OFF2 ACTIVE; proceed further to SWITCH ON INHIBIT.
2	OFF3	1	Continue operation (OFF3 inactive).
		0	Emergency stop. Proceed to OFF3 ACTIVE; proceed further to SWITCH-ON INHIBIT.
3	OPERATION_ ENABLE	1	Proceed to ENABLE OPERATION.
		0	Inhibit operation. Proceed to OPERATION INHIBIT.
4	RAMP_OUT_ ZERO	1	Normal operation. Proceed to RAMP FUNCTION GENERATOR: ENABLE OUTPUT.
		0	Stop according to selected stop type.
5	RAMP_HOLD	1	Normal operation.
		0	Proceed to RAMP FUNCTION GENERATOR: ENABLE ACCELERATOR. Halt ramping (Ramp Function Generator output held).
6	RAMP_IN_ZERO	1	Normal operation. Proceed to OPERATING. Note: This bit is effective only if the fieldbus interface is set as the source for this signal by drive parameters.
		0	Force Ramp Function Generator input to zero.
7	RESET	0 -> 1	Fault reset if an active fault exists. Proceed to SWITCH ON INHIBIT.
		0	(Continue normal operation)
8	INCHING_1	-	Inching 1. (Not supported)
9	INCHING_2	-	Inching 2. (Not supported)
10	REMOTE_CMD	1	Network control enabled.
		0	Network control disabled.
11 to 15	-	-	Reserved

Table 10 Status Word for the PROFIdrive Communication Profile

Bit	Name	Value	STATE/Description
0	RDY_ON	1	READY TO SWITCH ON.
		0	NOT READY TO SWITCH ON.
1	RDY_RUN	1	READY TO OPERATE.
		0	OFF1 ACTIVE.
2	RDY_REF	1	ENABLE OPERATION.
		0	DISABLE OPERATION.
3	TRIPPED	1	FAULT.
		0	No fault.
4	OFF_2_STA	1	OFF2 inactive.
		0	OFF2 ACTIVE.
5	OFF_3_STA	1	OFF3 inactive.
		0	OFF3 ACTIVE.
6	SWC_ON_INHIB	1	SWITCH-ON INHIBIT ACTIVE.
		0	SWITCH-ON INHIBIT NOT ACTIVE.
7	ALARM	1	Warning/Alarm.
		0	No Warning/Alarm.
8	SPEED_ERROR	1	WITHIN TOLERANCE
		0	OUT OF TOLERANCE
9	REMOTE	1	Drive control location: REMOTE.
		0	Drive control location: LOCAL.
10	AT_SETPOINT	1	OPERATING. Actual value equals reference value (i.e., is within tolerance limits).
		0	Actual value differs from reference value (i.e., is outside tolerance limits).
11 to 15	-	-	Reserved

◆ Yaskawa Vendor-Specific Control and Status Words

■ The Control Word and the Status Word

The contents of the Control Word and the Status Word are detailed in [Table 11](#).

■ Frequency Reference

Frequency Reference is a 16-bit word containing the desired output frequency.

■ Output Frequency

Output Frequency is a 16-bit word containing the current output frequency of the drive.

Table 11 Yaskawa-Specific Control Word and Status Word

Yaskawa-Specific Control Word		Yaskawa-Specific Status Word	
Bit	Description	Bit	Description
0	Run bit	0	Running
1	Reverse run bit	1	Zero Speed
2	EF0	2	Reverse Operation
3	Fault Reset	3	Reset Signal Input Active
4	DI1	4	At Speed
5	DI2	5	Ready
6	DI3	6	Alarm
7	DI4	7	Fault
8	DI5	8	oPE Fault
9	DI6	9	Uv Return
10	DI7	10	2nd Motor
11	DI8 <I>	11	ZSV
12	Not Used	12	Not Used
13	Not Used	13	Not Used
14	Not Used	14	Net Reference
15	Not Used	15	Net Control

<I> Bit 11 is not used for GA500.

8 Web Interface

The web server interface to the drive option through port 80 allows management of diagnostic information through a standard web browser. The available pages include:

- Home Page
- PROFINET Page
- Network Page
- Chart Page
- Email Alerts Page
- Parameter Access Page
- Settings Page

Access the web server interface by typing the IP address of the SI-EP3 option in a web browser address.

Example: "http://192.168.1.20"

The SI-EP3 IP Address is available using drive keypad to access Option Monitors U6-80 to U6-83. Refer to [Table 8](#) for details.

8 Web Interface

◆ Home Page

The Home page shows the status of the drive and the I/O. It also shows identifying information about the drive and the option card.

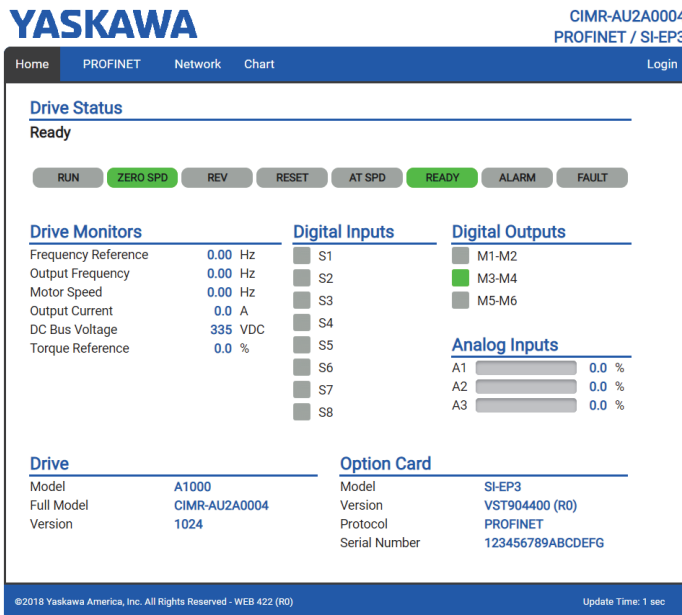


Figure 19 Home Page View

Note: The initial password is yaskawa. To change the password, open the Settings Page.

◆ PROFINET Page

The PROFINET page shows basic information about the protocol. The station name of the option card can be modified here, if the option is not actively connected to a PLC.

YASKAWA CIMR-AU2A0004
PROFINET / SI-EP3

Home **PROFINET** Network Chart Login

PROFINET

PLC Status Connected
Station Name a1000

Edit Station Name

Edit Station Name Cancel Station Name Edit

New Station Name

Save Station Name

©2018 Yaskawa America, Inc. All Rights Reserved - WEB 422 (R0) Update Time: 1 sec

Figure 20 PROFINET Page View

8 Web Interface

◆ Network Page

The Network page shows the status of the option network traffic and the status of open I/O connections.

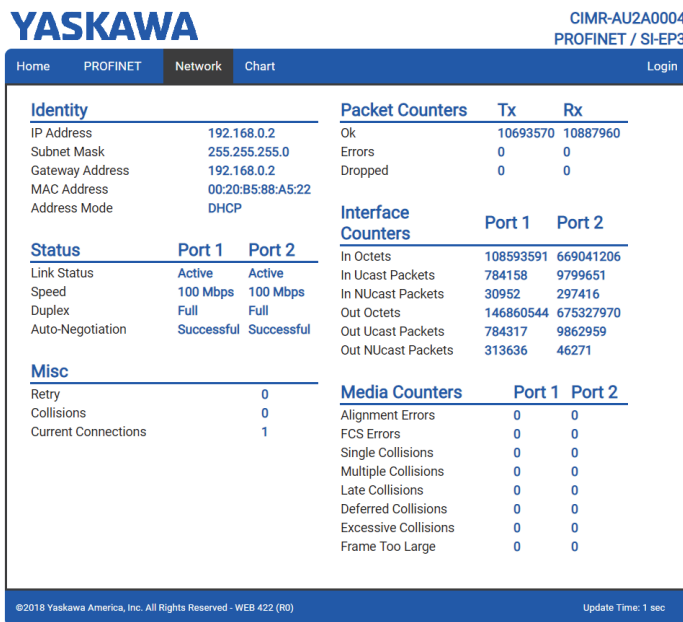


Figure 21 Network Page View

Table 12 Network Monitor Descriptions

Network Monitor	Explanation
Msg Tx OK	Cumulative number of messages transmit successfully from SI-EP3.
Msg Rx OK	Cumulative number of messages received successfully to SI-EP3.
Current Connections	Current number of open connections.
Msg Tx Dropped	Cumulative number of messages dropped due to output network buffer being full and unable to hold the new message.
Msg Rx Dropped	Cumulative number of messages dropped due to input network buffer being full and unable to hold the new message.
Collisions	Cumulative number of collisions (half duplex only) reported by the MAC/PHY (Media Access Control/Physical Layer).
Msg Tx Errors	Cumulative number of transmit errors reported by the MAC/PHY (Media Access Control/Physical Layer).
Msg Rx Errors	Cumulative number of receive errors reported by the MAC/PHY (Media Access Control/Physical Layer).
Tx Retry	Cumulative number of retransmits due to busy medium reported by the MAC/PHY (Media Access Control/Physical Layer).
IP Address	IP Address of the option card.
Subnet Mask	Subnet Mask of the option card.
Gateway Address	The Gateway IP Address that the option card will use.
MAC Address	MAC Address of the option card.
Address Mode	Either static IP address or DHCP.
Link Status	Active if the cable is plugged in, or inactive if no cable.
Speed	Connection speed, either 10 Mbps or 100 Mbps.
Duplex	Display either Full or Half.
Auto-Negotiation	If auto-negotiation is enabled, this will show the status of the negotiation.
In Octets	Cumulative number of incoming octets.
In Ucast Packets	Cumulative number of unicast packets received.
In NUCast Packets	Cumulative number of non-unicast packets received.
Out Octets	Cumulative number of outgoing octets.
Out Ucast Packets	Cumulative number of unicast packets sent.
Out NUCast Packets	Cumulative number of non-unicast packets sent.
Alignment Errors	Cumulative number of errors for uneven packets lengths.
FCS Errors	Cumulative number of frame check sequence errors.
Single Collisions	Cumulative number of single collisions.
Multiple Collisions	Cumulative number of multiple collisions.
Late Collisions	Cumulative number of late collisions.
Deferred Collisions	Cumulative number of deferred collisions.

8 Web Interface

Network Monitor	Explanation
Excessive Collisions	Cumulative number of excessive collisions.
Frame Too Large	Cumulative number of frames that exceed the maximum frame size.

Note: Cumulative counters are reset when the power supply is cycled.

◆ Chart Page

The Chart page can be used to monitor one signal from a predefined list.

List:

- Frequency Reference
- Output Frequency
- Output Current
- Motor Speed
- Torque Reference
- DC Bus Voltage
- Terminal Analog Input 1
- Terminal Analog Input 2
- Terminal Analog Input 3

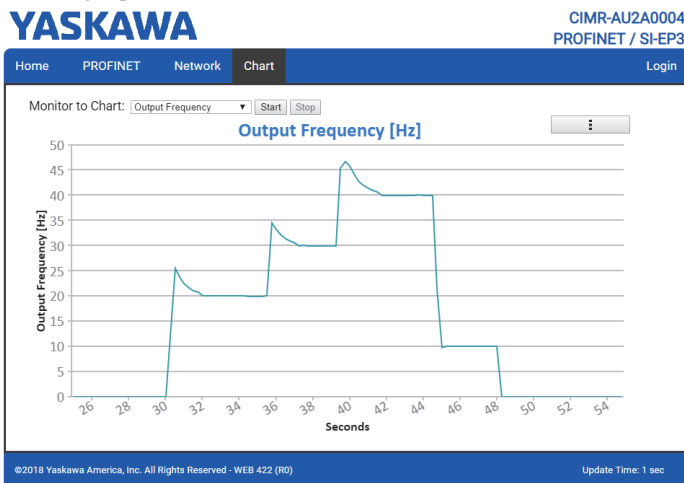


Figure 22 Chart Page View

◆ Email Alerts Page

The Email Alerts page allows the user to configure four Email Fault/Alarm conditions. When the condition is true, one email will be sent to the provided email address. Another email will not be sent until the condition becomes false and then true again. A 30-second timer prevents emails from being sent when conditions reoccur immediately after being removed. The timer helps limit the amount of emails sent regarding the same intermittent condition and helps to reduce network traffic by reducing emails about reoccurring errors.

YASKAWA CIMR-AU2A0004
PROFINET / SI-EP3

Home PROFINET Network Chart **Email Alerts** Parameter Access Settings Logout

Conditional Email 1

Enable ☐

Condition Frequency Reference

Address ToAddress1@ToDomain1 Subject Subject1

Text1

Message

Conditional Email 2

Enable ☐

Condition Frequency Reference

Address ToAddress2@ToDomain2 Subject Subject2

Text2

Message

Conditional Email 3

Enable ☐

Condition Frequency Reference

Address ToAddress3@ToDomain3 Subject Subject3

Text3

Message

Conditional Email 4

Enable ☐

Condition Frequency Reference

Address ToAddress4@ToDomain4 Subject Subject4

Text4

Message

Save Email Settings

©2018 Yaskawa America, Inc. All Rights Reserved - WEB 422 (R6) Update Time: 1 sec

Figure 23 Email Alerts Page View

■ Procedure: Conditional Email Set-up

1. Click the "Enable" check box to enable the alert.
2. Define the condition that will trigger the email by selecting a monitor parameter, a comparator, and a value. Set the conditions to send alerts from the "Condition" drop-down selection. If choosing only one condition and no OR or AND are needed, set the "OR/AND" drop-down selection to "----".
3. Enter the email address where the alert will be sent.
4. Enter the message that will appear in the email contents.
5. Enter the email subject.

Clicking "Save Email Settings" will save the entered information into the option.

◆ Parameter Access Page

The Parameter Access page allows the user to read and write parameters from the drive. Write access is restricted until a valid password is entered.

YASKAWA CIMR-AU2A0004
PROFINET / SI-EP3

Home PROFINET Network Chart Email Alerts **Parameter Access** Settings Logout

Parameter Access

Modbus Register Address (hex)

Decimal Value

Hex Value

Save All Writes to EEPROM (ROM Enter)

Status **Ready**

©2018 Yaskawa America, Inc. All Rights Reserved - WEB 422 (R0) Update Time: 1 sec

Figure 24 Parameter Access Page View

The MEMOBUS/Modbus address for the drive parameter being accessed must be entered in hexadecimal.

Clicking “Read” will load and display the current value of the given MEMOBUS/Modbus Address. Clicking “Set” will save the given value to the given MEMOBUS/Modbus address.

After a “Read” or “Set” command is given, Status will display “Waiting” while the action is being carried out, then “Read Successful” or “Write Successful” is displayed when finished.

◆ Settings Page

The Settings page sets web page behavior parameters. Access is restricted unless a valid password is entered.

The screenshot shows the Yaskawa web interface settings page. At the top right, the text 'CIMR-AU2A0004 PROFINET / SI-EP3' is displayed. The navigation bar includes links for Home, PROFINET, Network, Chart, Email Alerts, Parameter Access, Settings (which is highlighted), and Logout. The main content area is divided into three sections: 'Webpage Settings' with a 'Data Update Time' dropdown set to '1 second' and a 'Save Settings' button; 'Webpage Password' with fields for 'Current Password', 'New Password' (with a note: 'New password must be within 6 and 9 characters.'), and 'Confirm Password', each with a 'Save Password' button; and 'Email Settings' with fields for 'Email Server IP Address' (192.168.1.25), 'Email Server Port' (25), and 'From Email Address' (FromAddress@FromDomain), each with a 'Save Email Settings' button. The footer contains the copyright notice '©2018 Yaskawa America, Inc. All Rights Reserved - WEB 422 (R0)' and 'Update Time: 1 sec'.

Figure 25 Settings Page View

■ Security Login

Click “Login” and enter a valid password. The button text will change to “Log out” and the status will change to “Logged in”.

Note: The default security password is “**yaskawa**”.

This password can be changed in the “Change Password” section of the Settings page. Entering a valid password allows access to the settings in the Settings page, Email Alerts page, and the Parameter Access page.

■ Webpage Password

To change the password, enter the new password in the “New Password:” and “Confirm Password:” text boxes then click “Save password”.

8 Web Interface

■ Webpage Settings

The values displayed in the various tabs are refreshed at the rate defined in the “Data Update Time” select box. The Data Update Time can be set to 250 ms, 500 ms, 1 second, 2 seconds, or 5 seconds.

■ Email Settings

The “Email Server IP Address” text box must contain the IP address of the email server. The subnet address is configured in drive parameters F7-05 through F7-08. The configured email alerts will use the server at this address when sending emails.

Enter the email server port in the “Email Server Port” text box.

The value in the “From’ Email Address” text box identifies the origin of the email alerts to the recipient.

Click “Save Email Settings” to save the email settings to the option.

9 Troubleshooting

◆ Drive-Side Error Codes

Drive-side error codes appear on the drive keypad. [Table 13](#) lists causes of the errors and possible corrective actions. Refer to the drive Technical Manual for additional error codes that may appear on the drive keypad.

■ Faults

Both bUS (Option Communication Error) and EF0 (Option Card External Fault) can appear as either an alarm or as a fault. When a fault occurs, the keypad ALM LED remains lit. When an alarm occurs, the keypad ALM LED flashes.

Check the following items first when an error code occurs on the drive:

- Communication cable connections
- Make sure the option is properly installed to the drive
- Operation status of the controller program and controller CPU
- Did a momentary power loss interrupt communications?

Table 13 Fault Displays, Causes, and Possible Solutions

Keypad Display		Fault Name
bus	bUS	Option Communication Error
		<ul style="list-style-type: none">• After establishing initial communication, the connection was lost.• Only detected when the run command frequency reference is assigned to the option (bl-01 = 3 or bl-02 = 3).
Cause		Possible Solution
No signal was received from the PLC.		<ul style="list-style-type: none">• Check for faulty wiring.• Correct any wiring problems.
Faulty communications wiring		
An existing short circuit or communications disconnection		Check disconnected cables and short circuits and repair as needed.
A data error occurred due to electric interference.		<ul style="list-style-type: none">• Counteract noise in the control circuit, main circuit, and ground wiring.• If a magnetic contactor is identified as a source of noise, install a surge absorber to the contactor coil.• Use only recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side.• Separate all communication wiring from drive power lines. Install an EMC noise filter to the drive power supply input.• Counteract noise in the master controller (PLC).
The option is not properly connected to the drive.		Reinstall the option.
Option is damaged.		If there are no problems with the wiring and the error continues to occur, replace the option.

9 Troubleshooting

Keypad Display		Fault Name
EFO	EF0	Option Card External Fault
		The alarm function for an external device has been triggered.
Cause		Possible Solution
An external fault was received from the PLC.		1. Remove the cause of the external fault. 2. Reset the external fault input from the PLC.
Problem with the PLC program.		Check the PLC program.
Keypad Display		Fault Name
oFA00	oFA00	Option Card Connection Error (CN5-A)
		Option is not properly connected.
Cause		Possible Solution
The option card installed into port CN5-A is incompatible with the drive.		Connect the option to the correct option port. Note: PG option cards are supported by option ports CN5-B and CN5-C only.
Keypad Display		Fault Name
oFA01	oFA01	Option Card Fault (CN5-A)
		Option is not properly connected.
Cause		Possible Solution
The option connected to option port CN5-A was changed during run.		De-energize the drive and plug the option into the drive according to <i>Installation Procedure on page 18</i> .
Keypad Display		Fault Name
oFA03, oFA04	oFA03, oFA04	Option Card Error (CN5-A)
		Option Card Error (CN5-A)
Cause		Possible Solution
A fault occurred in the option.		1. De-energize the drive. 2. Make sure that the option is correctly connected to the connector. 3. If the problem continues, replace the option.
Keypad Display		Fault Name
oFA30 to oFA43	oFA30 to oFA43	Option Card Connection Error (CN5-A)
		Communication ID error.
Cause		Possible Solution
The option card connection to port CN5-A is faulty.		1. Turn off the power. 2. Check if the option is properly plugged into the option port. 3. Replace the option if the fault continues to occur.

Keypad Display		Fault Name
oFb00	oFb00	Option Fault (CN5-B)
		Non-compatible option is connected.
Cause		Possible Solution
The option card installed into port CN5-A is incompatible with the drive.		Connect the option to the correct option port. Note: Use connector CN5-B when connecting DO-A3, AO-A3, or two PG options. Use connector CN5-C when connecting only one PG option.
Keypad Display		Fault Name
oFb02	oFb02	Option Fault (CN5-B)
		Two identical options are connected at the same time.
Cause		Possible Solution
An option of the same type is already installed in option port CN5-A, CN5-B, or CN5-C.		Connect the option to the correct option port.
Keypad Display		Fault Name
oFc00	oFc00	Option Fault (CN5-C)
		Non-compatible option is connected.
Cause		Possible Solution
The option card installed into port CN5-C is incompatible with the drive.		Connect the option to the correct option port. Note: AI-A3, DI-A3, and communication options are not supported by option port CN5-C.
Keypad Display		Fault Name
oFc02	oFc02	Option Fault
		Option Flash write mode.
Cause		Possible Solution
An option of the same type is already installed in option port CN5-A, CN5-B, or CN5-C.		Connect the option to the correct option port.

9 Troubleshooting

■ Option Fault Monitors U6-98 and U6-99

The option can declare error/warning conditions via drive monitor parameters on the drive keypad as shown in [Table 14](#).

Table 14 Option Fault Monitor Descriptions

Fault Condition	Fault Declared	Status Value (U6-98/U6-99)	Description
No Fault	N/A	0	No faults.
Force Fault	EF0	3	Network sent a message to force this node to the fault state.
Network Link Down	bUS	1300	No network link to option board.
Network Failure	bUS	1301	Connection with PLC Timeout.
Default MAC Address	None	1303	Factory default MAC Address programmed into the option. Return for reprogramming.
No IP Address	None	1304	No IP Address has been programmed into the option.
No Station Name	None	1305	No Station Name has been programmed into the option.
Bad Station Name Programmed	None	1306	Station Name Programmed is invalid and must be reprogrammed.
Init. Failure	None	1307	Initialize error on power-up.
Permanent Communication Loss	bUS	1308	Fatal error in MAC/PHY hardware, requires power cycle to recover.
Bad IP Configuration	None	1309	Invalid IP/subnet/gateway address programmed into F7-01 to F7-12.

Two drive monitor parameters, U6-98 and U6-99 assist in network troubleshooting:

- U6-98 displays the first declared fault since the last power cycle. U6-98 is only cleared upon drive power-up.
- U6-99 displays the present option SI-EP3 status. U6-99 is cleared upon a network-issued fault reset and upon power-up.

If another fault occurs while the original fault is still active, parameter U6-98 retains the original fault value and U6-99 stores the new fault status value.

◆ Option Compatibility

Users may connect up to 3 options simultaneously depending on the type of option. Refer to [Table 15](#) for details.

Note: You can only connect one option to the GA500. Connect the option card to the CN5 connector.

Table 15 Option Compatibility

Option Card	Connector	Number of Cards Possible
PG-B3, PG-X3	CN5-B, C	2 <1>
PG-RT3 <2> <3>, PG-F3 <2> <3>	CN5-C	1
DO-A3, AO-A3	CN5-A, B, C	1
SI-C3, SI-N3, SI-P3, SI-S3, SI-T3, SI-ET3, SI-ES3, SI-B3, SI-M3, SI-W3 <3>, SI-EM3 <3>, SI-EN3 <3>, SI-EP3, AI-A3 <4>, DI-A3 <4>, SI-EN3D, SI-EM3D	CN5-A	1

<1> When connecting two PG option cards, use both CN5-B and CN5-C. When connecting only one PG option card, use the CN5-C connector.

<2> Not available for the application with Motor 2 Selection.

<3> Not available with 1000-Series drive models with a capacities between 450 and 630 kW.

<4> When you use the input status of AI-A3 and DI-A3 as a monitor, you can connect AI-A3 and DI-A3 to CN5-A, CN5-B, or CN5-C.

10 European Standards



Figure 26 CE Mark

The CE mark indicates compliance with European safety and environmental regulations. It is required for engaging in business and commerce in Europe.

European standards include the Machinery Directive for machine manufacturers, the Low Voltage Directive for electronics manufacturers, and the EMC guidelines for controlling noise.

This option displays the CE mark based on the EMC guidelines.

EMC Guidelines: 2014/30/EU

Drives used in combination with this option and devices used in combination with the drive must also be CE certified and display the CE mark. When using drives displaying the CE mark in combination with other devices, it is ultimately the responsibility of the user to ensure compliance with CE standards. Verify that conditions meet European standards after setting up the device.

◆ EMC Guidelines Compliance

This option is tested according to European standards EN 61800-3:2004/A1:2012 and complies with EMC guidelines. The CE marking is declared based on the harmonized standards.

■ EMC Guidelines Installation Conditions

Verify the following installation conditions to ensure that other devices and machinery used in combination with this option and drives also comply with EMC guidelines:

1. Use dedicated shield cable for the option and external device (encoder, I/O device, master), or run the wiring through a metal conduit.
2. Keep wiring as short as possible and ground the largest possible surface area of the shield to the metal panel according to [Figure 28](#).

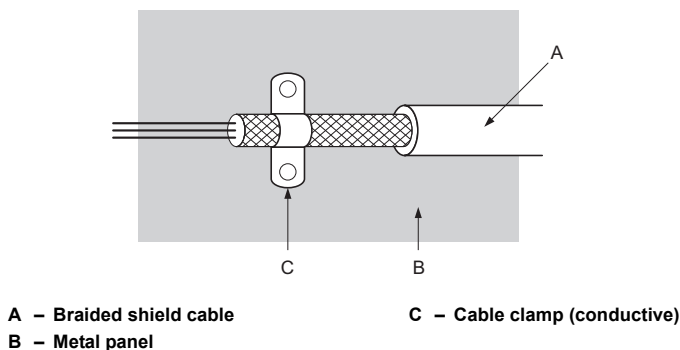


Figure 27 Ground Area

■ Option Installation for CE Compliance: Models PG-□□, DI-□□, DO-□□, AI-□□, AO-□□, SI-□□

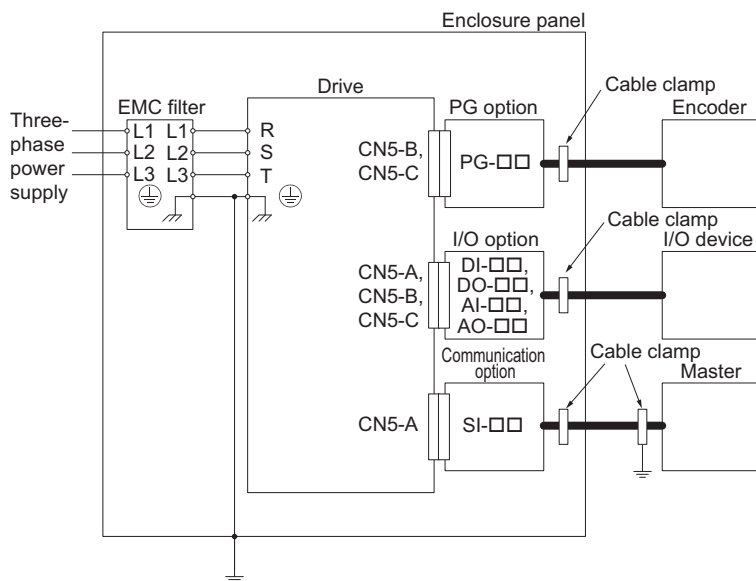


Figure 28 Option Installation for CE Compliance (PG-□□, DI-□□, DO-□□, AI-□□, AO-□□, SI-□□)

■ Option Installation for CE Compliance with GA500

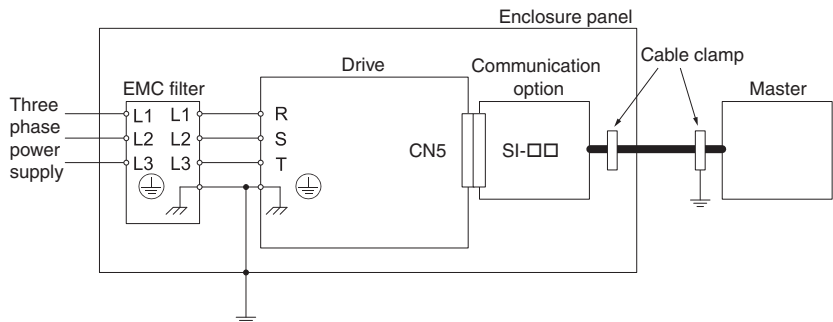


Figure 29 Option Installation for CE Compliance with GA500

11 Specifications

Table 16 Option Specifications

Items	Specifications
Model	SI-EP3
Option Conformance	Passed PROFINET Conformance Class A
Connector Type	Dual RJ45 8-pin Shielded Twisted Pair Cat 5e cable
Physical Layer Type	Isolated Physical Layer TCP Protocol Transformer Isolated
IP Address Setting	Programmable from drive keypad or network
Communication Speed	Programmable from drive keypad or network: 10/100 Mbps, auto-negotiate.
Number of Connections	1 PLC connection, 1 supervisor connection, 2 web page connections
Duplex Mode	Half-forced, Auto-negotiate, Full-forced
Address Startup Mode	Static, DCP
Ambient Temperature	-10°C to +50°C (14°F to 122°F)
Humidity	Up to 95% RH (no condensation)
Storage Temperature	-20°C to +60°C (-4 °F to 140°F) (allowed for short-term transport of the product)
Area of Use	Indoors and free from: <ul style="list-style-type: none"> • Oil mist, corrosive gas, flammable gas, and dust • Radioactive materials or flammable materials, including wood • Harmful gas or fluids • Salt • Direct sunlight • Falling foreign objects
Altitude	1000 m (3280 ft) or lower
PROFINET Functions	PROFINET IO with PROFIdrive profile Configurable I/O in cyclic messages Drive diagnostic alarms I&M0

12 Disposal

◆ Disposal Instructions

Correctly dispose of this product and packing material as specified by applicable regional, local, and municipal laws and regulations.

◆ WEEE Directive



Figure 30 WEEE Mark

The wheeled bin symbol on this product, its manual, or its packaging identifies that you must recycle it at the end of its product life.

You must discard the product at an applicable collection point for electrical and electronic equipment (EEE).

Do not discard the product with usual waste.

◆ Revision History

Revision dates and manual numbers appear on the bottom of the back cover.

MANUAL NO.

TOBP C730600 89B <1>

Revision number

Published in Japan September 2017

Date of publication

Date of Publication	Revision Number	Section	Revised Content
February 2019	<3>	All	Addition: Applicable product series Revision: Reviewed and corrected entire documentation.
		Chapter 12	Addition: Disposal
January 2019	<2>	All	Addition: Applicable product series Revision: Reviewed and corrected entire documentation.
		Back cover	Revision: Address
September 2017	<1>	Chapter 2	Addition: Note in Table 1
		Back cover	Revision: Address
May 2016	—	—	First edition

YASKAWA AC Drive Option

PROFINET

Installation Manual

DRIVE CENTER (INVERTER PLANT)

2-13-1, Nishimiyachi, Yukuhashi, Fukuoka, 824-8511, Japan
Phone: +81-930-25-2548 Fax: +81-930-25-3431
<http://www.yaskawa.co.jp>

YASKAWA ELECTRIC CORPORATION

New Pier Takeshiba South Tower, 1-16-1, Kaigan, Minatoku, Tokyo, 105-6891, Japan
Phone: +81-3-5402-4502 Fax: +81-3-5402-4580
<http://www.yaskawa.co.jp>

YASKAWA AMERICA, INC.

2121, Norman Drive South, Waukegan, IL 60085, U.S.A.
Phone: +1-800-YASKAWA (927-5292) or +1-847-887-7000 Fax: +1-847-887-7310
<http://www.yaskawa.com>

YASKAWA ELÉTRICO DO BRASIL LTDA.

777, Avenida Piraporinha, Diadema, São Paulo, 09950-000, Brasil
Phone: +55-11-3585-1100 Fax: +55-11-3585-1187
<http://www.yaskawa.com.br>

YASKAWA EUROPE GmbH

Hauptstraße 185, 65760 Eschborn, Germany
Phone: +49-6196-569-300 Fax: +49-6196-569-398
<http://www.yaskawa.eu.com> E-mail: info@yaskawa.eu.com

YASKAWA ELECTRIC KOREA CORPORATION

33F, Three IFC, 10 Gukjegeumyung-ro, Yeongdeungpo-gu, Seoul, 07326, Korea
Phone: +82-2-784-7844 Fax: +82-2-784-8495
<http://www.yaskawa.co.kr>

YASKAWA ASIA PACIFIC PTE. LTD.

30A, Kallang Place, #06-01, 339213, Singapore
Phone: +65-6282-3003 Fax: +65-6289-3003
<http://www.yaskawa.com.sg>

YASKAWA ELECTRIC (THAILAND) CO., LTD.

59, 1st-5th Floor, Flourish Building, Soi Ratchadapisek 18, Ratchadapisek Road, Huaykwang, Bangkok, 10310, Thailand
Phone: +66-2-017-0099 Fax: +66-2-017-0799
<http://www.yaskawa.co.th>

YASKAWA ELECTRIC (CHINA) CO., LTD.

22F, Link Square 1, No.222, Hubin Road, Shanghai, 200021, China
Phone: +86-21-5385-2200 Fax: +86-21-5385-3299
<http://www.yaskawa.com.cn>

YASKAWA ELECTRIC (CHINA) CO., LTD. BEIJING OFFICE

Room 1011, Tower W3 Oriental Plaza, No. 1, East Chang An Ave.,
Dong Cheng District, Beijing, 100738, China
Phone: +86-10-8518-4086 Fax: +86-10-8518-4082

YASKAWA ELECTRIC TAIWAN CORPORATION

12F, No. 207, Sec. 3, Beishin Rd., Shindian Dist., New Taipei City 23143, Taiwan
Phone: +886-2-8913-1333 Fax: +886-2-8913-1513 or +886-2-8913-1519
<http://www.yaskawa.com.tw>

YASKAWA INDIA PRIVATE LIMITED

#17/A, Electronics City, Hosur Road, Bangalore, 560 100 (Karnataka), India
Phone: +91-80-4244-1900 Fax: +91-80-4244-1901
<http://www.yaskawaindia.in>

YASKAWA

YASKAWA ELECTRIC CORPORATION

In the event that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Regulations. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply.
Specifications are subject to change without notice for ongoing product modifications and improvements.

© 2016 YASKAWA ELECTRIC CORPORATION

MANUAL NO.

TOBP C730600 89D <3>

Published in Japan February 2019
18-11-20